



Modell L +

07.sep.20

1 Joystick L, L-Plus, L+, X	7350006080630	31 Nedre ramme	7351007738456
2 Joystickpinne (gummi styrspak)	7350006081330	32 Støttehjul	7351008897763
3 Joystickfäste L, L+, X	7350006080890	33 Stattehjul holder	7351001234117
4 Spärr Armstöd Höger	7350006080821	34 Ramme høyre	7351007600453
5 Ryggstöd	7350006081347	35 Ramme venstre	7351002733946
6 Låshake P, H, L, L+, M+	7350006080951	36 Rammedel liten	7351002811745
7 Motorkit L+ höger	7350006080661	37 Armlen nedre del	7351004228374
8 Kontrollbox - ny modell	7350006080647	38 Batteriboks	7351002293745
9 Batteri 2 stift - gänga	7350006080111	39 Armlensrør komplett venstre	7351002815534
10 Frikopplingshandtag	7350006080722	40 Armlensrør komplett høyre	7351002937456
11 Motorkit F vänster	7350006080678	41 Gummiknott	7251002833740
12 Växellåda, L+, P,X,D2	7350006081552	42 Gummiknott	7351008253341
13 Distanspuck Motor	7350006081064	Batteriladdare 3 Amp	7350006080142
14 Drivhjul 12" luft svart (st)	7350006080258	Bygelkabel 2 stift - gänga	7350006080371
15 Bakskärm L-Plus, L+, X	7350006080166	Joystick-kabel till box	7350006080838
16 Armstöd M-Plus, L, L+, X	7350006080319	Säkerhetsbälte	7350006080401
17 Spärr Armstöd Vänster	7350006080807	Vadstöd	7350006080906
18 Länkhjul 8" solid svart (st)	7350006080272		
19 Framgaffel	7350006080876		
20 Lager länkhjulshus dim 28/12 mm	7350006080296		
20 Lager länkhjul dim 22/8 mm	7350006080302		
21 Gummiplupp	7350006081316		
22 Laddarväska	7350006080333		
23 Gummiplatta fotstöd	7350006080340		
24 Ändplugg Sidorör	7350006080944		
25 Sitsramklädsel L+	7350006081354		
26 Dyna Standard 5 cm	7350006080128		
27 Rygggramklädsel L+	7350006081392		
28 Ryggklädsel Standard	7350006080135		
29 Seteramme L+	7351008735623		
30 Gassfjær L+	7351007833562		



