



Modell X

1 Gummihandtag modell X	7350006081323	26 Vinkeljustering rygg X	7350006080982
2 Motorkit X höger	7350006081576	27 Chassi bärande sidostycke X_H	7350006081576
3 Kontrollbox	7350006081040	28 Chassi bärande sidostycke X_H	7350006080647
4 Batteri Modell X	7350006080746	29 Chassi armstöd undre justerbar X	7350006082153
5 Bakskärm L-Plus, F, X	7350006080166	30 Chassi handtag X	7350006082344
6 Frikopplingshandtag	7350006080722	31 Vinkeljustering handtag_rygg X	7350006082351
7 Drivhjul 12" luft svart (st)	7350006080258	32 Chassi armstöd X H&V kpl	7350006082078
8 Motorkit X vänster	7350006081569	33 Tiphjul inkl. Lager	7350006082221
9 Växellåda, L, F, P,X,D2	7350006081552	34 Chassi vik-ram X kpl	7350006082368
10 Distanspuck Motor	7350006081064	35 Batteribox modell X	7350006082375
11 Gummiplupp	7350006081316	36 Rörsäte plast modell X	7350006082382
12 Lager länkhjul dim 22/8 mm	7350006080302	37 Chassi anti tipp kpl	7350006082399
12 Lager länkhjulshus dim 28/12 mm	7350006080296	38 Skärmstagg modell X	7350006082405
13 Framgaffel	7350006080876	Batteriladdare 3 Amp	7350006080142
14 Länkhjul 8" solid svart (st)	7350006080272	Bygelkabel Modell X mellan batteri	7350006081491
15 Fotstöd modell X Vänster kpl	7350006080869	Joystick-kabel till box	7350006080838
16 Spärrhake Fotbåge Modell X	7350006080975	Säkerhetsbälte	7350006080401
17 Fotstöd modell X Höger kpl	7350006080937	Vinkel justerings mekanism Modell X	7350006080982
18 Dyna Modell X	7350006080739	Kabel box till Batteri	7350006081767
19 Sitsramklädsel X	7350006081378		
20 Ryggklädsel Modell X	7350006080760		
21 Rygggramklädsel X	7350006081309		
22 Joystickfäste L, L-plus, F, X	7350006080890		
23 Joystick L, L-Plus, F, X	7350006080630		
24 Joystickpinne (gummi styrspak)	7350006081330		
25 Armstöd M-Plus, L, L-Plus, F, X	7350006080319		

